


Adapted Toy Drive Instructions for Adaptation / Packaging Stage

- 1) **Unbox toy**. Keep the box in good condition, as they will be used again.
- 2) **Open battery compartment**. Try not to lose the screws!
- 3) **Insert battery interrupter**. Place the flat end of the battery interrupter between the end of a battery and the metal contact in the compartment.

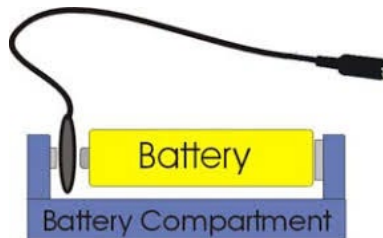

- 4) **Connect switch**. Close the battery compartment and plug a switch into the battery interrupter. **Test to be sure the setup is working: turn your toy to the “on” position and activate the attached switch!**
 - *If the toy doesn't activate*: reposition the battery interrupter. The copper tape should be touching the battery. Use a different battery interrupter if needed.
 - If this does not resolve the problem, set the toy aside and label it as not working. Someone with more experience will help troubleshoot.
 - *If the toy runs without you holding down the switch*: the battery interrupter is not working. Try adjusting the placement (make sure it covers the end of the battery). Look to see whether the copper tape overlaps the paper at the edges; fix if possible. Use a different battery interrupter if needed.
- 5) **Repackage**. Return the toy, including its switch, back to the box. Set in the finished pile.

Thank you!

